




**CAUTION ! USE SAFETY GLASSES AT ALL TIMES WITH THIS UNIT.**

## PRODUCT OVERVIEW

THANK YOU FOR YOUR PURCHASE. THIS IS A NEW WAY TO DELIVER SCENTS ON A SCHEDULE. THE UNIT OPERATES ON ONE 9 VOLT SNAP TOP ALKALINE BATTERY. (NOT INCLUDED). USING ANY BRAND OF SCENT, YOU CAN DELIVER THIS SCENT INTO THE AIR ON A SCHEDULE OF EVERY 30 MINUTES DURING THE DAYLIGHT HOURS.

THE UNIT HAS A MAGNETIC REMOVABLE VILE OR CUP, WHICH TAKES ONLY SECONDS TO INSTALL OR REMOVE. THE MICRO MOTOR WHIRLS THE SCENT INSIDE THE VIAL INTO A UNIQUE VORTEX. THIS MINIATURE TORNADO INSIDE THE VIAL TECHNICALLY RAISES THE INTERNAL PRESSURE. THIS INCREASE IN PRESSURE BEGINS TO FORCE THE SCENT OUT OF A EXTREMELY SMALL MICRO HOLE. THE FORCE CREATES A MICRO MIST, WHICH INJECTS THE SCENT INTO THE AIR. THE SMALL 1/2 OUNCE VIAL WILL GENERALLY LAST APPROXIMATELY 5 DAYS BEFORE NEEDING TO BE REFILLED. THIS REPEAT CYCLE OF EVERY 30 MIN. ESTABLISHES A PATTERN OF SCENT IN THE AIR. BELOW IS STEP BY STEP INSTRUCTIONS ON THE OPERATION OF THIS PRODUCT.

**FIG. 1**

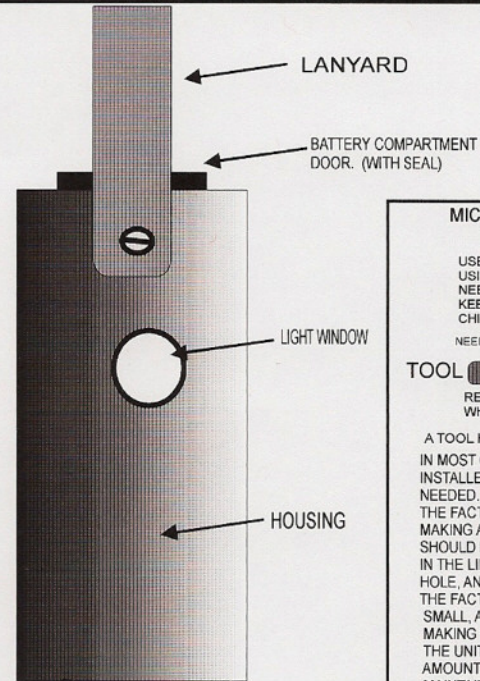

**MICRO HOLE TOOL**  
**CAUTION !**  
USE EXTREME CARE IN USING THIS TOOL. THE NEEDLE IS VERY SHARP. KEEP OUT OF REACH OF CHILDREN.  
NEEDLE CAP  
**TOOL** REPLACE THE CAP WHEN FINISHED.  
A TOOL HAS BEEN INCLUDED. IN MOST CASES, THE FACTORY INSTALLED HOLE IS ALL THAT IS NEEDED. WE RECOMMEND USING THE FACTORY HOLE BEFORE MAKING A SECOND HOLE. YOU SHOULD LIMIT THE TOTAL HOLES IN THE LID TO TWO. THE FACTORY HOLE, IS EXTREMELY SMALL, AND CAN BE HARD TO SEE. MAKING LARGER HOLES WILL CAUSE THE UNIT TO LEAK AND DUMP LARGE AMOUNTS AT ONE TIME. USE CARE TO MAINTAIN THE SMALL MICRO HOLE.

**STEP 1.** AS IN FIG. 1, CHECK TO MAKE SURE THE ON OFF SWITCH IS IN THE OFF POSITION.

**STEP 2.** SEE FIG. 1. REMOVE THE TWO PHILLIPS HEAD SCREWS AND REMOVE THE BATTERY COMPARTMENT DOOR ALONG WITH THE SEAL.

**STEP 3.** SEE FIG. 1. INSTALL A 9 VOLT ALKALINE BATTERY REINSTALL THE BATTERY COMPARTMENT DOOR AND SEAL.

**STEP 4.** SEE FIG. 1. **CAUTION! WEAR SAFETY GLASSES.** FLIP THE ON OFF SWITCH TO THE ON POSITION. WAIT 10 SECONDS TO SEE THE MAGNETIC HOLDER ROTATE FOR FIVE SECONDS. THIS ESTABLISHES THAT EVERYTHING IS WORKING. THIS IS JUST A TEST AND SHOULD NOT INCLUDE SCENT AT THIS TIME.

**STEP 5.** SEE FIG. 2. REMOVE THE LID FROM THE PLASTIC VILE. FILL WITH YOUR SCENT, BUT DO NOT OVER FILL. LEAVE 1/8" OF SPACE AT THE TOP OF THE VILE. SNAP THE LID BACK ON TOP OF THE VILE. MAKE SURE THE LID CLICKS OR SNAPS IN PLACE. THE VILE IS NOW READY TO INSTALL INTO THE MAGNETIC HOLDER. THE VILE INSTALLS IN AN INVERTED POSITION ( TOP FACING DOWN). THE SMALL MICRO HOLE ACTUALLY SEALS OFF LEAKAGE, AND WILL ALLOW THE MIST ONLY DURING THE VORTEX ACTION THE ON OFF SWITCH SHOULD BE TURNED TO THE ON POSITION. NOTE THE 10 SECOND DELAY IN THE TEST. THE UNIT WILL RUN FOR THE 5 SECONDS.

**STEP 6.** YOUR UNIT IS NOW READY FOR USE. THE SMALL COMPUTER ON BOARD NOW MEASURES THE DAY. THE UNIT WILL START AT DAY BREAK AND RUN FOR 2 SECONDS PER RUN, AND REPEAT THIS ACTION EVERY 30 MIN. UNTIL DARK. THE CYCLE WILL REPEAT EVERY DAY UNTIL THE UNIT IS TURNED OFF.

ON OFF SWITCH

MAGNETIC VIAL HOLDER

PLASTIC LID (WITH MICRO HOLE)

CLEAR PLASTIC VILE OR CUP

PLASTIC LID (WITH MICRO HOLE)

**FIG. 2**

CLEAR PLASTIC VILE OR CUP

**NOTE:**  
THE MISTER P CAN OPERATE IN ANY POSITION. THE MOST COMMON POSITION IS SHOWN IN FIG.1.

## OPTIONAL ITEMS:

THIS UNIT CAN USE ON TIME'S DIGITAL KEY OPTION. THIS ALLOW THE USER TO SET EXACT TIMES FOR THE SCENT, AS WELL AS SPACE THE SCENT TIMES FROM EVERY 15 MIN. IN ONE MIN STEPS UP TO 99 MIN. THIS OPTION IS THE SAME KEY USED ON THE ULTRA HUNT MODEL FEEDER UNIT AS WELL AS THE C74 MODEL FEEDER UNITS. THE DURATION OF EXACT TIMES MAY ALSO BE PROGRAMED

EXTRA VIALS ARE AVAILABLE AS WELL AS A 1 OUNCE FOR MORE DAYS OF OPERATION.