




# BUCKEYE GRAVITY FEEDER

## HARDWARE PACK:

- 12 – BOLTS
- 12 – FLAT WASHERS
- 12 – NUTS
- 12 – LOCK WASHERS

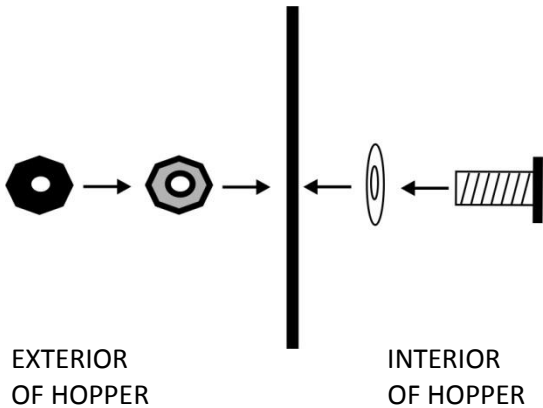

## INSTRUCTIONS:

STEP 1: INSTALL 1 LEG BY PLACING 4 BOLTS EACH THROUGH 1 FLAT WASHER AND THEN THROUGH THE LEG BRACKET FROM THE INSIDE OF THE HOPPER. ON THE EXTERIOR INSTALL 1 LOCK WASHER, THEN 1 NUT FOR EACH BOLT. THIS SAME PROCEDURE WILL BE DONE FOR EACH LEG.

STEP 2: MAKE SURE ALL NUTS AND BOLTS ARE FULLY TIGHTENED.

STEP 3: INSTALL THE INTERNAL FUNNEL BY REMOVING HOPPER LID AND PLACING CONE WITH TIP POINTING UP INSIDE THE HOPPER. GROOVES ON THE INTERNAL FUNNEL SHOULD BE POSITIONED TO LINE UP WITH EACH LEG. PLEASE NOTE THE FUNNEL IS FLEXIBLE AND MAY BE COMPRESSED TO MAKE IT FIT.